



FEBRUARY 26, 2025


PRODUCT UPDATE

NEW DRIVE BRACKET MODIFICATION


We have reports of the drive bracket breaking when removing the motor and dislodging in shipment.

The new modification eliminates the motor push tab and secures the drive motor tighter.

This will be a rolling change as inventory of the current design is used.

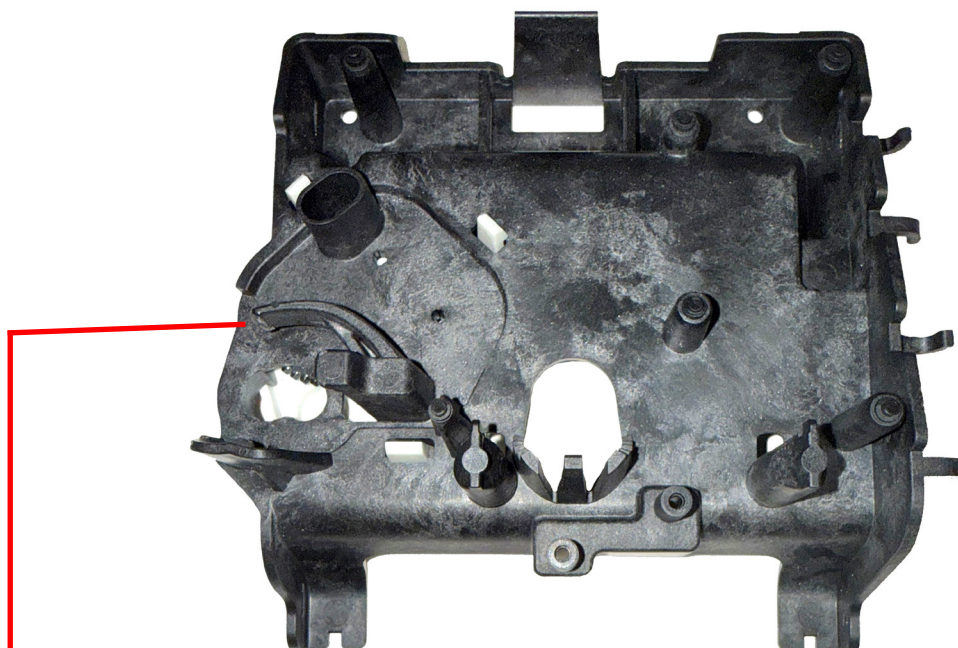

Modified Drive Bracket

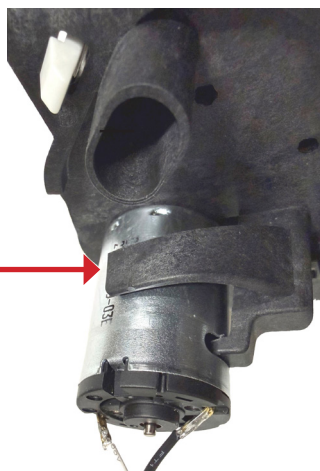

Tab Removed

Current Drive Bracket




Tab in Place

See next page for motor removal and installation.


If you have any questions please contact us. • Thank You • Water Treatment Sales
4462 Duraform Lane • Windsor, WI 53598-9716
Phone (608) 846-3010 • Fax (800) 755-3010

MOTOR REMOVAL AND INSTALLATION INSTRUCTIONS

1. When removing the motor, push the motor from the bottom and top side of the retaining clip straight out and away from the locking tab and pull the motor up and out of the drive bracket.

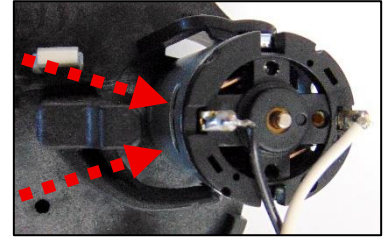


2. When installing the motor, place the motor gear side down into the end of the slot in the drive bracket furthest away from the locking tab. Ensure the holes in the motor housing are a quarter-turn away from the locking tab.

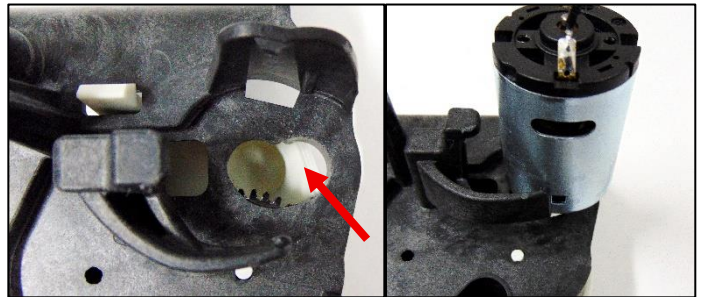

3. Ensure the motor is flush with the drive bracket before proceeding.



4. Gently rotate the motor clockwise (to the right) while pushing the motor towards the locking tab. The motor will engage the gears in the drive bracket while sliding into place.

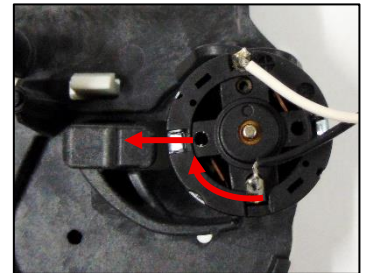

5. Ensure the locking tab on the drive bracket is fully inserted into one of the holes in the motor housing.

